CREATING A CUSTOM BOARD MCUXPRESSO SDK

AMF-SOL-T3986

BRENDON SLADE MCU ECOSYSTEM TEAM MARCH 2020





SECURE CONNECTIONS FOR A SMARTER WORLD

PUBLIC

Course pre-requisites/notes

- This course is an update of a 2019 Tech Day course on creating a custom SDK (AMF-SOL-T3532)
 - Updates include new functionality provided for custom SDK creation, first introduced in MCUXpresso IDE 11.0
- The first section of this course for Tech Day hands-on sessions would include introductions to the MCUXpresso suite of tools
 - These introductory notes are also coverd in AMF-SOL-T3991 "Understanding MCUXpresso IDE and Configuration tools"
 - These are not included in this training slide set



Content

- Recap of MCUXpresso SW and Tools
- MCUXpresso Config Tools overview
- Changing package and part types
- Overview of the Custom SDK wizard
- Lab/demo sessions:
 - Creating a board configuration
 - Creating a Custom Board SDK
 - Using a Custom Board SDK with the New Project Wizard
 - Applying a board configuration to new and existing projects



The MCUXpresso Ecosystem



Core Technologies from NXP:

- MCUXpresso IDE
- MCUXpresso SDK
- MCUXpresso Config Tools
- MCUXpresso Secure Provisioning Tool

Enabling Software Technologies:

- Run time software libraries and middleware
- Enable customers to focus on differentiation
- From NXP and partners

Enabling Tools Technologies:

- Partner IDEs
- Debug Probes
- Development Boards
- From NXP and partners



Streamlined MCUXpresso development flow





Easy-to-use muxing and pin assignments

.....

E

11111

ins	🛛 🖞 Peripi	nerals						🕼 Package 🖂				Q	Q († 🖗	~	Registers	🖹 Log 💽 Sources 🛛		- (
5	type filte	er text												-	pin_mux.c pin_mux.h			2
1	Pin name	Label		Identifier	GPIO U	IART	FI ^		PTC3/	MIL SPEC APTO APTO L SUV	241 0	APTR APTR			/*			
7		CS3 J151G	11/SD CAR	SDHC CD	PTE6 U	ART3 CTS b	FI		z	SPE	8822 5500 890 890 800 800 800 800 800 800 800 8	S S S S S S S S	0Ê		* Copyright * All right	ht (c) 2016, Freesc	ale Semiconductor, In-	c.
10	USB0 DP	J22[3]	/K64 MIC	USB DP					SS12	1920	1919 1919 1919 1919 1919 1919 1919 191	MIN DOUD BUILD	1919		*	and reserved.		
1		J22[2]	/K64_MIC	USB_DM					>>0	444 L L L L L L L L L L			αS		* Redistri	ibution and use in	source and binary for	ns, wi
8		Y3[1]	XTAL32_R	XTAL32K											* are perr	mitted provided tha	t the following condi	tions
9		Y3[2]	EXTAL32	ETAL32K					40.00	AD	C1	CAND			* o Redist	tributions of source	e code must retain th	e abox
1		PTE J2[20]	/U8[4]/12C	ACCEL SCL	PTE24 U	IART4 TX		PTC4/LDWU_P8/	CMPD	Ch	191	CMP2		ECTALO	* of cor	nditions and the fo	llowing disclaimer.	
2		PTE J2[18]	/U8161/12C	ACCEL SDA	PTE25 U	ART4 RX		PTC6	смт	DA	0	DMA		VDDH0				
3	PTE26	J2[1]/	D12[4]/LE	LED GREEN	PTE26 U	ART4 CTS b		CMPD_IN1/PTC7/	ENET	EV	M	E2Port		RMID_TXD1	* o Redist	tributions in binar	y form must reproduce	the a
8	PTA4/LLWL	P3/ SW3		SW3	PTA4		F	ADC1_SESt/	FB	FT	MD	FTMI		RMID_TXEN	* other	materials provided	with the distributio	er 10
ā		CLKT. U1311	71/RMI0 R	RMID RXFR	PTA5		E	ADC1_SERN/PTC10/	FTM2	FT	MD	GPIOA		RMID_CRS_	*	nate and provided		
42		PTA. U13[1	21/RMID R	RMID RXD1	PTA12	UARTO_TX UARTO_RX	E	PTC12/ PTC12/ PTC13	GPI0	GP GP	GPIOC	GPIOD 12C1	VS594 VD53 RMI0_ VD53 RMI0_ PTA9/ PTA9/ PTA9/	RMID_RXD1 =	 O Neither the name of Freescale Semiconductor, Inc. r contributors may be used to endorse or promote proc software without specific prior written permission. * THIS SOFTWARE IS PROVIDED BY THE COPYLIGHT HOLDERS A ANY EXPRESS ON INVELTED WARANTIES, INCLIDING, BUT NOT 			Inc. r
			213]/RMI0_R 215]/RMI0 219]/RMI0_T	RMID RXD0	PTA13		E		GPI0	: 20	U.			VS \$64				
		DCS 1828		RMB0_CRS_DV RMB0_TXEN	PTA14 U		·	PTC15/UART4_DV	I2C2 LLWU	LPT	I2S0 JTAG LPTMR0 OSC RCM RTC SM SPI0	JTAG		RMID_RXER				ssion.
		SCK UISI			DTA15 U		_	V\$\$139				RTC		PTAG				
		SCR 013(1			PTAIS U			PTC16/UART3_RX/	POR	RL CB				PTA2/UARTD				
		_SU UIS(2	0 J/R/MED_T		PTALO U	MARTO_CTS_D[]	-	PTC17/UART3_TX/	SPI1	SP	n n	SUPPLY		PTA1/UARTD	* WARRANT	IES OF MERCHANTABIL	ITY AND FITNESS FOR A	PARTI
1		013(2	1J/KMU0_1	KMU0_TXD1	PIAL/ U	IARTU_RTS_D	-	PTD0/LLWU_P12/	Swite	n Control TP		LIARTO	_	PTE26	* DISCLAI/	MED. IN NO EVENT SH	ALL THE COPYRIGHT HOL	DER OF
U		A18/ U13[1	6ј/кмц_к	EXTALO;RMU_RX	PTA18		F1	ADC0_SE55/PTD1/	UART	1 04	RT2	UARTS		12C0_SDA	* ANY DIR	ECI, INDIRECI, INCI	DENTAL, SPECIAL, EXEM	PLARY,
3		ADC U13[1	0]/RME0	0 RMB0_MD10 0 RMB0_MDC	PTB0		F	PTD3/SPID_SIN/	UART	4 US	80	USBDCD		RAT	<			
54		ADC U13[1	1]/RMII0		PTB1			PTD4/LU0/U_P14/	VREF				_	EXTAL32				
2		_SO U7[4]	/UART0_RX	DEBUG_UART_RX	PTB16 U	JARTO_RX	FI	ADC0_SE66/PTD5/						DACD OUT/.	A Problems	12		- 1
3		_SIN U10[1	U10[1]/UART0_TX D12[3]/LEDRGB	DEBUG_UART_TX myLED LED_RED	PTB17 U	UART0_TX	FI	PTD7/CMT_IRO/			FN1M0VLL12 - LQFP			VREF_OUT/.	have filter tool			
7	PTB21	D12[3			PTB21				MKE	4FN1M0VLL			ge		type filter text			
8	PTB22	D12[1	J/LEDRGB		PTB22										Level	Issue	Origin	
l	CMP0_IN0/	PTC U8[11]/SW2	SW2;ACCEL_INT1	PTC6				583	98888555	Seese:	E L L L L A E	50					
5	PTC13/UAR	T4 U8[9]		ACCEL_INT2	PTC13 U	IART4_CTS_b			8'8'8	088 988	59000	19999928	85					
									<u>55</u>	988 SI	\$^>999;	88855		*		-		
								<						•	•			
6	ed Pins																	-
t	er text																	
te	ed Pins 🖸	3 0																
	Peripheral	Signal	Route to	Label		Identifier	Directio	n Slew rate	Open drain	Drive strength	Pull select	Pull enable	Passive filt	er Digital filte	r			
	GPIOB	GPIO, 21	PTB21	D12[3]/LEDRGB	BLUE	myLED	Output	Slow	Disabled	Low	Pulldown	Disabled	Disabled	n/a				
	GPIOB	GPIO, 22	PTB22	D12[1]/LEDRGB	RED	LED_RED	Output	Slow	Disabled	Low	Pulldown	Disabled	Disabled	n/a				
	GRIOF	GPIO 26	PTE26	J2[11/D12[4]/LE	DRGB GREET	N LED GREEN	Output	Slow	Disabled	Low	Pulldown	Disabled	Disabled	n/a				

MCUXpresso Config Tools Pins Configuration

- Muxing and pin configuration with consistency checking
- ANSI-C configuration code
- Graphical processor package view
- Wizard for optimized assignments of functionality to available pins
 - Selection of Pins and Peripherals
 - Routed pins with electrical characteristics
 - Registers with configured and reset values
 - Source code for C/C++ applications
 - GPIO Input / Output initialization
- Documented and easy to understand source code
- Report generation
- Integrates with any compiler and IDE





Clock configuration and diagram view



MCUXpresso Config Tools Clock Configuration

- System clock configuration with consistency checking
- ANSI-C initialization code
- Graphical clock diagrams
- Easy-to-use guided graphical user interface
 - Selection of Clock Sources
 - Configuration of prescalers and clock outputs
 - Details and Full Diagram views with clock path
 - Registers with configured and reset values
 - Source code for C/C++ applications
- Documented and easy to understand source code
- Report generation



MCUXpresso IDE with integrated Config Tools

Use the MCUXpresso IDE Quick Start Panel to **import** an existing SDK Project or **create** a new one



MCUXpresso Config Tool – Standalone Tool Workflow



Config Tools – Basic concepts

- Generated files include special comments that allow the configuration to be restored directly from source code.
- The full configuration is save into a ".mex" configuration file that can be imported into new configurations to apply those settings.
- MCUXpresso Config Tool does not generate projects, but is designed to work with existing projects, however there are instances where you can clone an existing SDK example as a starting reference
- Functional groups enable flexibility within application development to (re)configure pins and peripherals at runtime
- Functional groups are available for clock configuration, but are not intended for switch clock settings during runtime
- The peripheral tool is designed to supplement the MCUXpresso SDK by providing a graphical configuration utility for the <peripheral>_Init() function. The peripheral tool generated the input structure to this function call.
- Config Tool data is downloaded independent of the IDE and SDK, when accessing the Config Tools, the tool
 will check online for the latest available data (which can include support for new features).



How to configure a pin?

- Pins Table Select cell at the cross section of the Pin and Mux setting
- Graphical Chip view popup dialog will guide thru possible selections

 Peripheral Signals view – similar to graphical chip view, with signals categorized as peripherals

Add new entry to "Routed Pins Table"



How to configure clock settings?

- Recommended to setup clock sources first.
- Select functional group's clock mode (MGC / PLL) to adjust several settings in sync
- Select desired output clock within Clocks Diagram view to see full clock path and limit details panel to relevant parameters
- Selecting on an object within the graphical view will allow many setting to be selected directly



Migrating from a standard SDK to a custom SDK





How to change device package?

Requires edits to IDE, SDK, and Config Tools:

- MCUXpresso IDE:
 - Not explicitly required, but can be changed to prevent conflict messaging in Config Tools
- MCUXpresso SDK:
 - Package variants use exact same SDK driver files
 - SDK uses preprocessor defines to properly compile SDK drivers for different packages
 - Preprocessor defines can be edited within the IDE project settings
- MCUXpresso Config Tools:
 - Use the "switch package" icon from within the Pins Tool to select a different package
 - Config Tools will attempt to transfer all compatible pin muxing settings to the new package





How to change device part number?

Option 1 – Create new project: Recommended / Cleaner approach

- MCUXpresso IDE:
 - Create a new blank SDK project for the desired device, this will ensure the IDE and SDK are setup correctly and include the correct SDK driver files.
 - Include all required drivers during the new project creation wizard (these can also be added later)
 - Copy application specific source files from previous project to new project (sources subfolder)
 - Update device header includes in application specific source files
- MCUXpresso SDK:
 - New IDE project should correctly setup needed preprocessor defines and include the correct SDK drivers that are unique to each device
- MCUXpresso Config Tools:
 - Open Config Tools to enable them within the new IDE project
 - Import the previously configured .mex file from the previous project to apply (as best possible) the pin and clock settings



How to change device part number?

Option 2 – Edit existing project: Harder, but might be necessary...

• MCUXpresso IDE:

- Change the target MCU in the IDE project settings
- Update device header includes in application specific source files

• MCUXpresso SDK:

- Change the preprocessor defines within the IDE project settings to match the device and package
- Replace all SDK drivers with equivalent ones from the correct SDK download
- Replace CMSIS header files, startup files, utilizes with equivalent ones from the correct SDK.

MCUXpresso Config Tools:

- The Config Tools will present errors in detect project setting and can auto corrected to the new device
- As needed, use the "switch package" icon from within the Pins Tool to select a different package
- Config Tools will attempt to transfer all compatible pin muxing settings to the new package



Board SDK Wizard

- Board SDK Wizard was introduced in MCUXpresso IDE 11.1
- Starting from an existing SDK and a project customized for your board, the Wizard enables:
 - Creation of an exportable .zip SDK package that others can easily import and use
 - SDK attributes, photo and #defines to be added to improve usability
- Primary purpose:
 - Enabling creation of applications using MCUXpresso IDE New Project Wizard with pin and clock configurations included



Example Custom SDK Creation

- Step 1: create a board configuration that includes the custom pin and clock configuration of the (custom) board being used
- Step 2: use the Custom SDK Wizard in MCUXpresso IDE to generate a custom SDK that can be imported and used by other developers in your team
- Step 3: create such a new project with the custom SDK from Step 2
- Step 4: use board configurations from Step 1 to modify a standard demo board example for use on a custom board
- These steps are described in the lab handout, and walked through in the video tutorial
- The tutorial uses the LPC845-BRK board (see next slide)
 - Although this board now has its own SDK, for the tutorial we will start from the LPC845 part SDK, as a representative flow from a standard NXP EVK



LPC845 Breakout Board - Overview



Schematics located at: <u>https://www.nxp.com/downloads/en/schematics/SCH_LPC845_BRK.zip</u>





SECURE CONNECTIONS FOR A SMARTER WORLD

NXP and the NXP logo are trademarks of NXP B.V. All other product or service names are the property of their respective owners. © 2018 NXP B.V.