

UM11232

NFC Antenna Design Tool User Manual

Rev. 2 — 8 February 2024

User manual

Document information

Information	Content
Keywords	NFC Antenna Design, NFC Reader IC, Antenna Matching, NFC Antenna Design Tool
Abstract	This document describes the usage of the NFC Antenna Design Tool that can extend or even replace the Excel file mentioned in the different application notes about the NFC antenna design.



1 Introduction

The NFC Antenna Design tool supports the antenna coil synthesis based on some basic input parameters and calculates the matching circuit for:

- **NXP NFC Reader ICs:** PN7462/PN7362/PN7360, PN5180, PN5190, CLRC663/MFRC630/SLRC610, CLRC663 plus, PN7120, PN7150, PN7160, PN7642 and PN7220.
- **NXP NFC Tag ICs:** NTAG I2C Plus, NTAG213F, SLIX 2, NTAG 5 Link and NTAG 5 Boost.

Check the details of the antenna design in each IC application note for specific considerations. Refer to [Section 4](#) for references.

The scope of the document is limited to the tool usage and does not cover NFC antenna design. For information on NFC antenna design, refer to [Section 4](#).

2 Application overview

The tool consists of three parts:

- Dielectric and Reader/Tag selector
- Antenna geometry and calculation
- Reader/Tag tuning calculation

Figure 1 shows the NFC Reader Antenna and tuning calculation part.

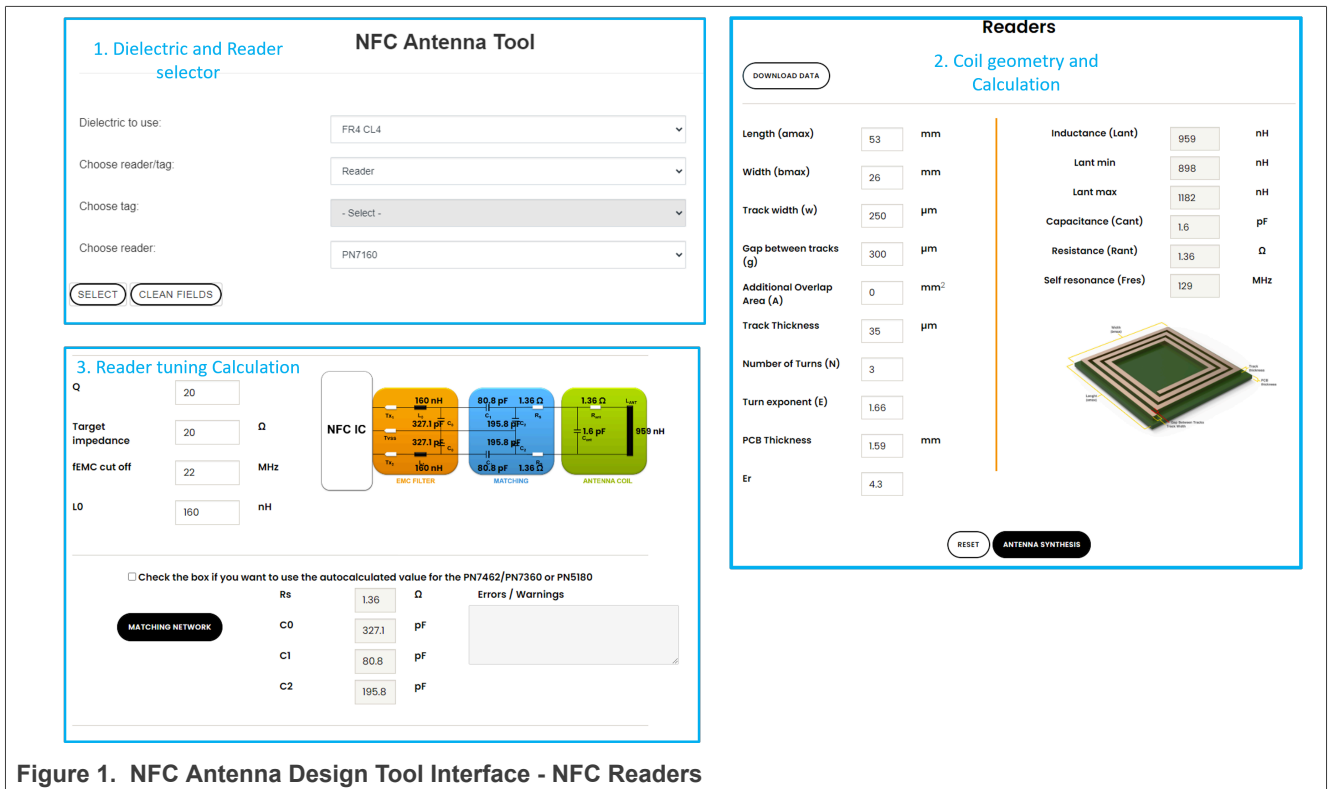


Figure 1. NFC Antenna Design Tool Interface - NFC Readers

Figure 2 shows the NFC Tag Antenna and tuning calculation part.



Figure 2. NFC Antenna Design Tool Interface - NFC Tag

3 Using NFC Antenna Design Tool

Step 1 - Run Online NFC Antenna Design Tool

- Go to [NFC Antenna Design Hub](#) page on NXP website.
- Go to the Downloads section.
- Click **DOWNLOAD** icon to run the tool ([Figure 3](#)).


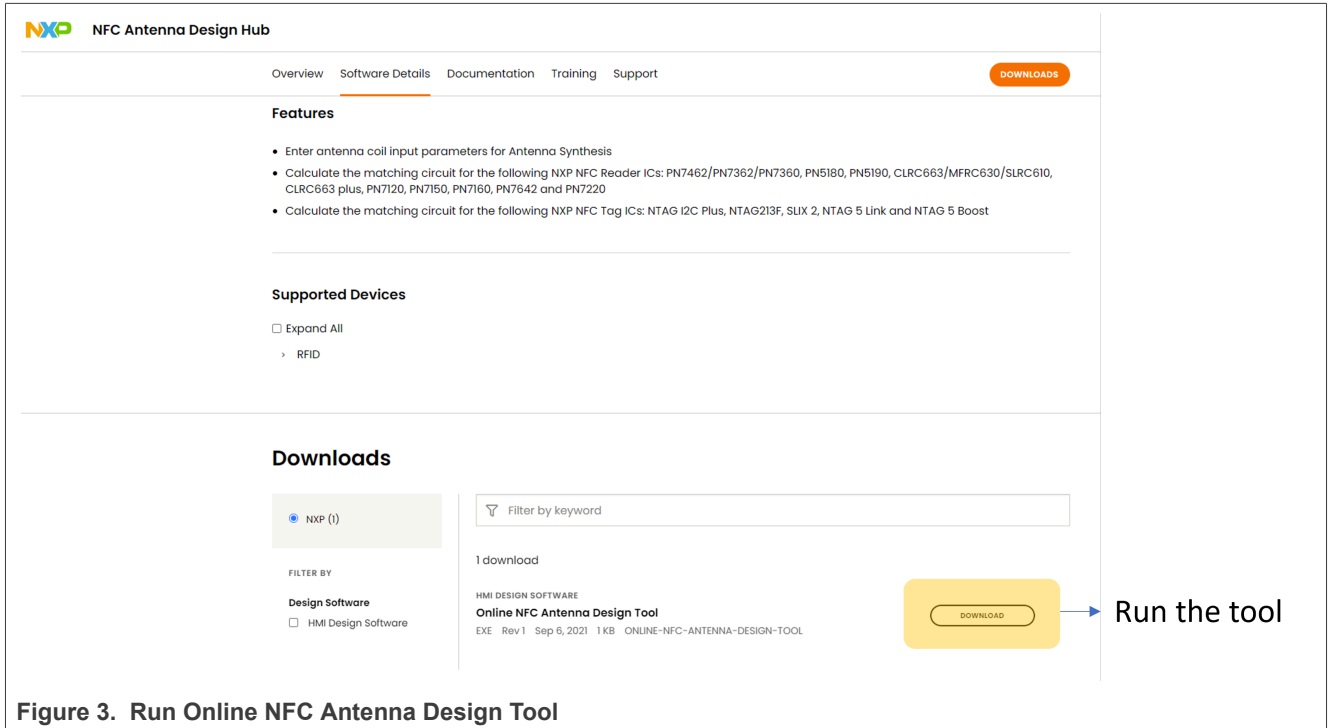


Figure 3. Run Online NFC Antenna Design Tool

Step 2 - Define the input parameters.

- Select the dielectric: choose between FR4 substrate, Flex material, and Air.
- Select one of the available NXP NFC Reader/Tag ICs in the list. The tool provides NXP recommended input values for each IC. You can modify the values can at any time.

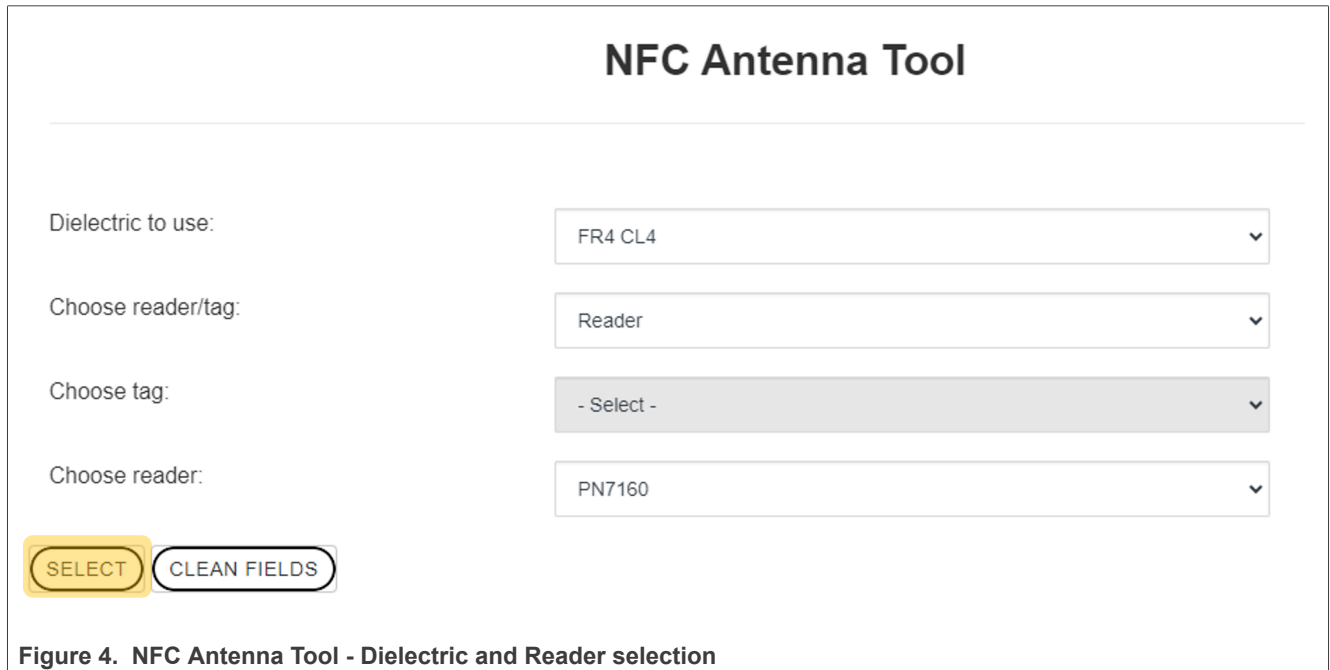

Step 3 - Define the antenna coil parameters.

NXP already provided a default value that can be modified. The input for the antenna coil parameter fields must be a positive number. The tool does not accept any other character. To fill the antenna coil input parameters, follow the recommendations for each NXP NFC Reader IC.

- Set all the parameters.
- Click **ANTENNA SYNTHESIS** icon.

Readers

DOWNLOAD DATA

Length (amax)	<input type="text" value="53"/>	mm
Width (bmax)	<input type="text" value="26"/>	mm
Track width (w)	<input type="text" value="250"/>	µm
Gap between tracks (g)	<input type="text" value="300"/>	µm
Additional Overlap Area (A)	<input type="text" value="0"/>	mm ²
Track Thickness	<input type="text" value="35"/>	µm
Number of Turns (N)	<input type="text" value="3"/>	
Turn exponent (E)	<input type="text" value="1.66"/>	
PCB Thickness	<input type="text" value="1.59"/>	mm
Er	<input type="text" value="4.3"/>	

Inductance (Lant)	<input type="text" value="Unit: nH"/>	nH
Lant min	<input type="text" value="Unit: nH"/>	nH
Lant max	<input type="text" value="Unit: nH"/>	nH
Capacitance (Cant)	<input type="text" value="Unit: pF"/>	pF
Resistance (Rant)	<input type="text" value="Unit: Ω"/>	Ω
Self resonance (Fres)	<input type="text" value="Unit: Mf"/>	MHz

RESET

ANTENNA SYNTHESIS

Figure 5. Antenna coil parameters

Step 4 - Check the calculated parameters.

Figure 6 shows the results of the coil parameters calculation (Antenna Synthesis).

- Inductance (Lant)
 - Lant min (represents the border positions depending on corner rounding)
 - Land max (represents the border positions depending on corner rounding)
- Overall capacitance (Cant)
- Overall resistance (Rant)
- Self-resonance frequency (fres)

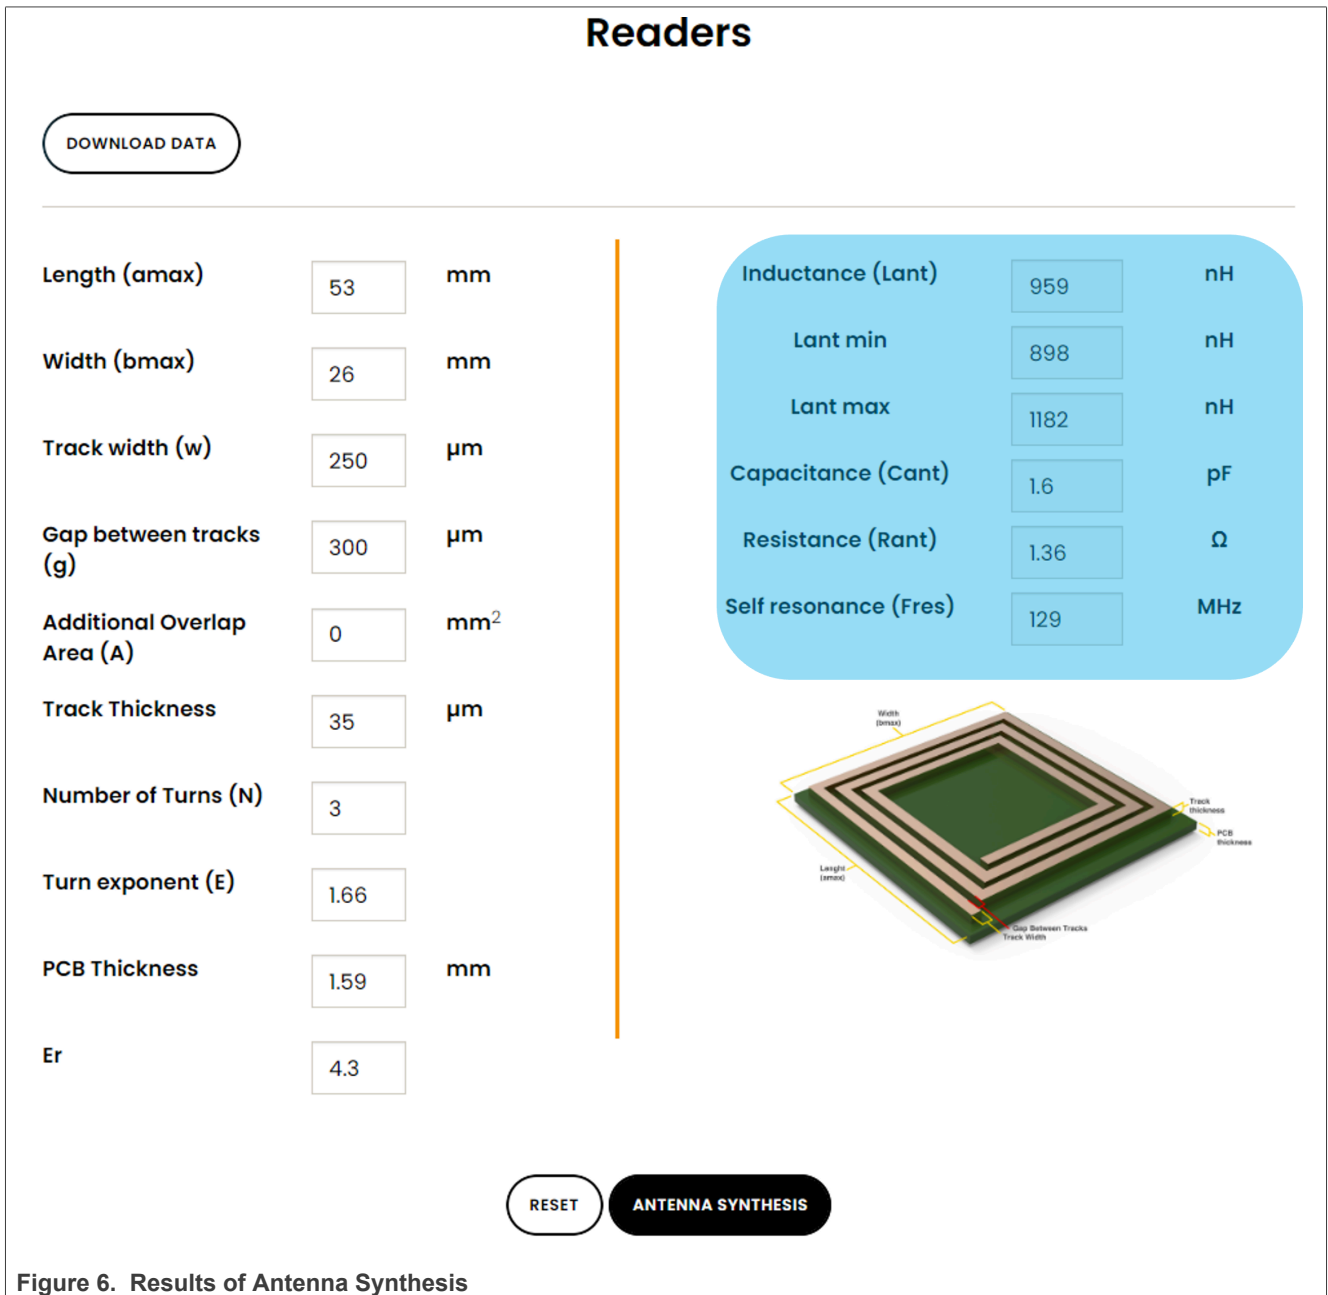


Figure 6. Results of Antenna Synthesis

Step 5 - Get NFC Reader tuning values.

The tool provides NXP recommended input values for each IC. You can modify the values at any time.

- Select the checkbox to get L0 recommended value for PN7462/PN7360 and the PN5180.
- Or, do not select the checkbox and enter a value for L0.
- Click **MATCHING NETWORK** icon.

Q: 20

Target impedance: 20 Ω

fEMC cut off: 22 MHz

L0: 160 nH

Check the box if you want to use the autocalculated value for the PN7462/PN7360 or PN5180

Component	Unit	Value	Errors / Warnings
Rs	Ω		
C0	pF		
C1	pF		
C2	pF		

Figure 7. NFC Reader tuning calculation

Step 6 - Check NFC Reader tuning values.

Figure 8 shows the tuning values for NFC Reader.

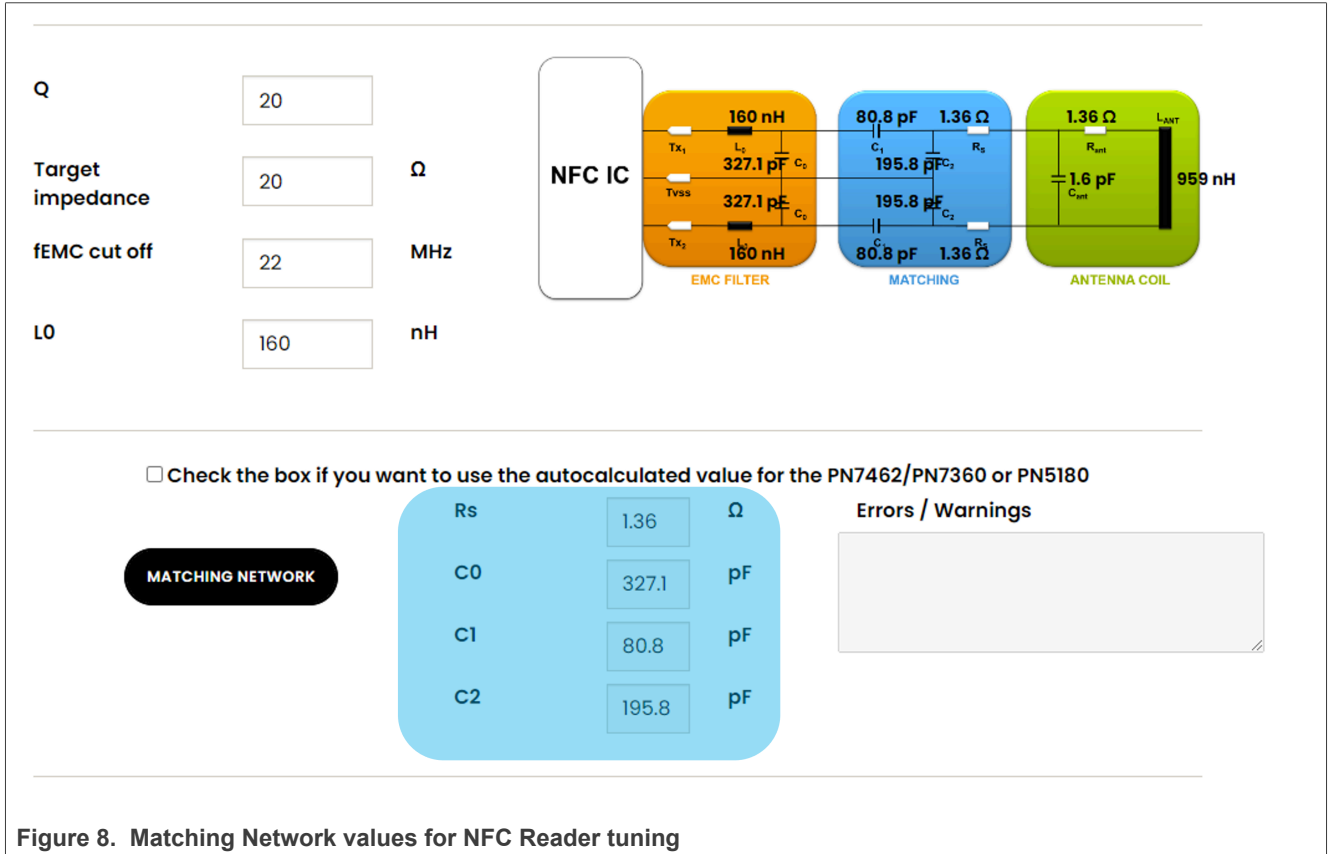


Figure 8. Matching Network values for NFC Reader tuning

Step 7 - Check for errors or warnings.

Figure 9 shows the example of fEMC cut-off frequency set too low.

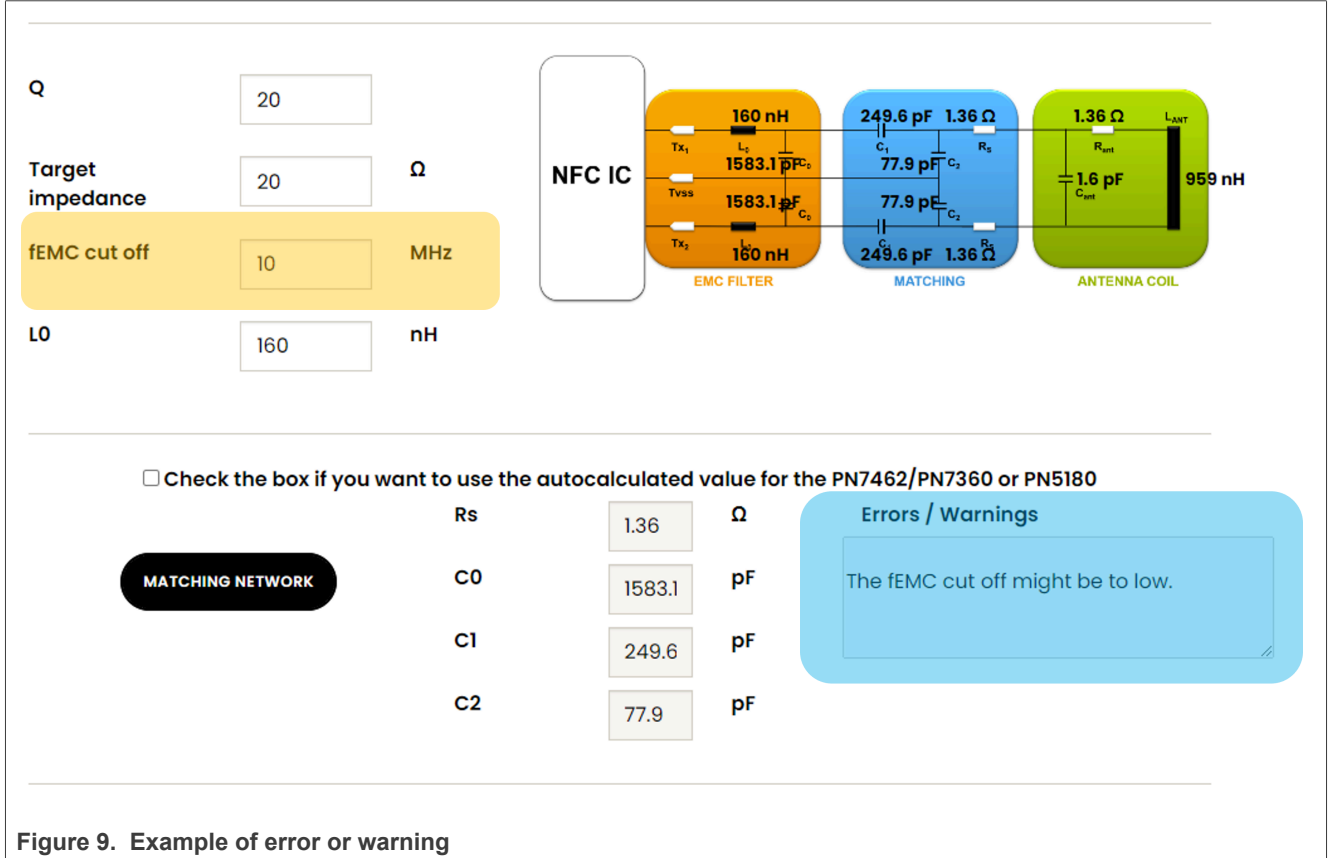


Figure 9. Example of error or warning

Step 8 - Download your data.

- Click the **DOWNLOAD DATA** icon to download your data in PDF format.

Readers

DOWNLOAD DATA

Length (amax)	<input type="text" value="53"/>	mm		Inductance (Lant)	<input type="text" value="959"/>	nH
Width (bmax)	<input type="text" value="26"/>	mm		Lant min	<input type="text" value="898"/>	nH
Track width (w)	<input type="text" value="250"/>	µm		Lant max	<input type="text" value="1182"/>	nH
Gap between tracks (g)	<input type="text" value="300"/>	µm		Capacitance (Cant)	<input type="text" value="1.6"/>	pF
Additional Overlap Area (A)	<input type="text" value="0"/>	mm ²		Resistance (Rant)	<input type="text" value="1.36"/>	Ω
Track Thickness	<input type="text" value="35"/>	µm		Self resonance (Fres)	<input type="text" value="129"/>	MHz
Number of Turns (N)	<input type="text" value="3"/>					
Turn exponent (E)	<input type="text" value="1.66"/>					
PCB Thickness	<input type="text" value="1.59"/>	mm				
Er	<input type="text" value="4.3"/>					

Figure 10. Download your data

4 References

- NFC Reader ICs:
 - [PN7462](#)
 - [PN7362](#)
 - [PN5180](#)
 - [PN5190](#)
 - [PN7120](#)
 - [PN7150](#)
 - [PN7160](#)
 - [PN7220](#)
 - [SLRC610 Plus](#)
 - [CLRC663 plus](#)
- NFC Tag ICs:
 - [NTAG I2C Plus](#)
 - [NTAG213F](#)
 - [SLIX 2](#)
 - [NTAG 5 Link](#)
 - [NTAG 5 Boost](#)
- Antenna design Guides:
 - [PN7462 family Antenna design guide](#)
 - [CLRC663, MFRC630, MFRC631, SLRC610 Antenna Design Guide](#)
 - [PN5190 antenna design guide](#)
 - [PN7150 Antenna Design and Matching Guide](#)
 - [PN7160 antenna design and matching guide](#)
 - [PN7120 Antenna Design and Matching Guide](#)
 - [NTAG Antenna Design Guide](#)
 - [Antenna design guide for NTAG 5 link and NTAG 5 switch](#)

5 Appendix

Lists of parameters and abbreviations.

Table 1. Antenna synthesis input parameters

Parameter	Description
Length (amax)	The total length of the rectangular antenna coil. The antenna coil outlines are defined by length (amax) and width (bmax). The antenna coil size defines the operating distance. A typical length value is 50 ... 100 mm.
Width (bmax)	The total width of the rectangular antenna coil. The antenna coil outlines are defined by length (amax) and width (bmax). The antenna coil size defines the operating distance. A typical width value is 50 ... 100 mm.
Track width (w)	The track width of the antenna coil traces. The tracks should not be too narrow to avoid too high losses. On the other side, wider tracks shrink the average antenna area, which reduces the performance. A reasonable track width is 500 μm .
Gap between tracks (g)	The distance between the antenna coil traces. This gap should not be too small to avoid a too low self-resonance frequency. On the other side, wider gaps shrink the average antenna area, which reduces the performance. A reasonable gap width is 500 μm .
Additional overlap area (A)	The additional area, where additional traces cover the antenna coil traces using the other layer, e.g. if additional traces cross the antenna coil traces. Such additional overlap area then slightly changes the overall antenna behavior. Note: <ul style="list-style-type: none"> The "normal" overlap area, which is caused by the bridge from the inner trace to the outside (or vice versa) is automatically taken into account. If no additional traces are crossing the antenna traces, this value is 0. A too large additional overlap area will reduce the performance of the antenna.
Track thickness	The thickness of the copper layer of a PCB. A typical value is 35 μm .
Number of turns (N)	The number of turns should be adjusted in a way that a target inductance of the antenna coil about 1 μH is achieved. Smaller antennas have more turns than larger ones. A typical antenna of 65 mm x 65 mm has 2 turns. Note: <ul style="list-style-type: none"> Too many (resp. too less) turns increase (resp. decreases) the inductance too much, which causes some weird tuning parameters. Too many turns can cause a low average area as well as a low self-resonance frequency. The inductance of the antenna coil directly impacts the minimum EMC filter inductance for some NXP NFC Reader ICs.
Turn Exponent (E)	The turn exponent defines the influence of additional turns. It depends on some environmental influences as well as the corner rounding. Typical values are 1.6 ... 1.7. The Antenna tool shows a minimum and a maximum value of the estimated inductance, which indicates the possible variation, e.g. depending on corner rounding. Note: <ul style="list-style-type: none"> Extra metal influence is not taken into account at all. The final inductance of the antenna coil as well as the tuning itself must be measured anyway to adjust the tuning.
PCB Thickness	The PCB thickness influences the antenna coil via the (normal and additional) overlap area.
Epsilon r (ϵ_r)	The relative dielectric constant of the PCB. A typical value of FR4 material is 4.3.

Table 1. Antenna synthesis input parameters...continued

Parameter	Description
Inductance (Lant)	<p>The result of the antenna coil synthesis, based on the input fields. The target should be a value around 1 μH. This value is taken as input to calculate the tuning.</p> <p>Note:</p> <ul style="list-style-type: none"> <i>This synthesis is based on a simple model, and any extra metal influence is not taken into account at all. So, the real value might vary a bit, especially depending on the antenna environment. Especially metal environment close to the antenna coil might decrease the inductance value.</i> <i>The final inductance of the antenna coil as well as the tuning itself must be measured anyway to adjust the tuning.</i>
Overall capacitance (Cant)	<p>The result of the capacitance of the antenna coil, estimated based on the input fields. This capacitance should be as low as possible. The capacitance value might be higher than calculated, since the antenna synthesis does not take any additional traces into account and assumes an ideal environment. This capacitance value is taken as input to calculate the tuning.</p>
Overall resistance (Rant)	<p>The losses of the antenna coil, given as resistance value. This loss is taken as input to calculate the tuning, and it must be low enough to allow a damping resistor (R_s) > 0 to achieve a realistic tuning. The resistance value in reality might be higher than calculated, since the antenna synthesis does not take any additional traces into account. Additional connection losses or losses due to metal environment are ignored in this calculation.</p>
Self-resonance frequency (fres)	<p>The self-resonance frequency is just shown as a reference value. The lower this value, the more critical the tuning might become. In any case it must be >30 MHz to allow a proper and stable tuning. A typical theoretical value is above 100 MHz.</p>

Table 2. Antenna tuning input parameters

Parameter	Description
NXP NFC Reader IC choice	<p>Based on the NXP NFC Reader IC choice some basic antenna tuning input parameters are set automatically: Q, Target impedance, and cut-off frequency. Any of the values can be manually modified, if needed.</p>
Q-factor (Q)	<p>The antenna q-factor (requirement) depends on the type of tuning and might vary a lot. Typical values are 15...25, when an NXP NFC Reader IC is chosen. It might be helpful to slightly modify this value a bit to achieve a reasonable value (E-series!) for the damping resistor R_s.</p> <p>Example: The tool might calculate $R_s = 0.94 \Omega$, based on $Q = 25$. Then it makes sense to change the $Q = 24$ to get $R_s = 1 \Omega$.</p>
Target impedance	<p>The target impedance defines the RF power. The typical, nominal value is chosen automatically together with the NXP NFC Reader IC. A higher impedance (to reduce the power consumption) can always be chosen, but that normally reduces the performance, too.</p>
fEMC cut off	<p>The cut-off frequency of the EMC filter defines the type of tuning (“asymmetrical” or “symmetrical” tuning). The choice of an NXP NFC Reader IC automatically defines this frequency. In any case, this frequency should be in the range of 14.5 ... 21 MHz.</p>
L0	<p>The EMC filter inductor value. This value can be determined automatically in combination with the used NFC Reader IC and the antenna synthesis, if the checkbox is selected: In case of a DPC tuning the minimum recommended value for the L0 is calculated automatically. It might make sense to manually set this value to the next available real inductor value (E-series!).</p> <p>Example: The Antenna tool calculates 386 nH, and the real choice might be 390 nH.</p> <p>This inductor is a critical component in the overall tuning. It must be able to drive the full power level without saturation effects, and it must provide the highest possible Q-factor.</p>

Table 3. Antenna tuning results for Readers

Parameter	Description
Rs	The damping resistor reduces the Q-factor to the required value. This is important to ensure the required bandwidth. It is important to choose a resistor, which can survive the proper power level. It might make sense to place two resistors (double the resistance value) in parallel to cover the required power level.
C0	The C0 defines the cut-off frequency (in combination with L0). Together with L0 it must be placed as close to the NXP NFC Reader IC as possible to keep the radiation of unwanted harmonics as low as possible. It might make sense to provide two capacitors in parallel for each C0 to be able to achieve the required value. Consider the voltage rating!
C1	The serial capacitance should not get < 15 ... 20 pF, otherwise the overall performance might be reduced. The tolerances must be considered! It might make sense to provide two capacitors for each C1 in parallel to be able to achieve the required value. Consider the voltage rating!
C2	The parallel capacitance normally is in the range of > 100 pF. The overall tuning gets unreliable, if the C2 < 50 pF. The tolerances must be taken into consideration! It might make sense to provide two capacitors for each C2 in parallel to be able to achieve the required value. Consider the voltage rating!

Table 4. Antenna tuning results for Tags

Parameter	Description
C	Parallel tuning capacitance
Inductance needed no matching capacitor	This value indicates the antenna inductance value for which the tuning capacitor is not required. The tuning is done with the help of the IC internal capacitance. If the inductance value is higher than this value, the NFC Tag cannot be properly tuned.

6 Revision history

Table 5. Revision history

Document ID	Release date	Description
UM11232 v.2	8 February 2024	<ul style="list-style-type: none">• Added NFC Readers: PN7160, PN7220.• Added NFC Tags: NTAG I2C Plus, NTAG213F, SLIX 2, NTAG 5 Link and NTAG 5 Boost.• Section 2 "Application overview": updated.• Section 3 "Using NFC Antenna Design Tool": updated.• Section 4 "References": updated.
UM11232 v.1	3 June 2019	<ul style="list-style-type: none">• Initial version

Legal information

Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk.

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at <https://www.nxp.com/profile/terms>, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this document expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

NXP B.V. — NXP B.V. is not an operating company and it does not distribute or sell products.

Licenses

Purchase of NXP ICs with NFC technology — Purchase of an NXP Semiconductors IC that complies with one of the Near Field Communication (NFC) standards ISO/IEC 18092 and ISO/IEC 21481 does not convey an implied license under any patent right infringed by implementation of any of those standards. Purchase of NXP Semiconductors IC does not include a license to any NXP patent (or other IP right) covering combinations of those products with other products, whether hardware or software.

Trademarks

NXP — wordmark and logo are trademarks of NXP B.V.

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

Tables

Tab. 1.	Antenna synthesis input parameters	14	Tab. 4.	Antenna tuning results for Tags	16
Tab. 2.	Antenna tuning input parameters	15	Tab. 5.	Revision history	17
Tab. 3.	Antenna tuning results for Readers	16			

Figures

Fig. 1.	NFC Antenna Design Tool Interface - NFC Readers	3	Fig. 5.	Antenna coil parameters	7
Fig. 2.	NFC Antenna Design Tool Interface - NFC Tag	4	Fig. 6.	Results of Antenna Synthesis	8
Fig. 3.	Run Online NFC Antenna Design Tool	5	Fig. 7.	NFC Reader tuning calculation	9
Fig. 4.	NFC Antenna Tool - Dielectric and Reader selection	6	Fig. 8.	Matching Network values for NFC Reader tuning	10
			Fig. 9.	Example of error or warning	11
			Fig. 10.	Download your data	12

Contents

1	Introduction	2
2	Application overview	3
3	Using NFC Antenna Design Tool	5
4	References	13
5	Appendix	14
6	Revision history	17
	Legal information	18

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.

© 2024 NXP B.V.

All rights reserved.

For more information, please visit: <https://www.nxp.com>

Date of release: 8 February 2024
Document identifier: UM11232